

Setting the RF channel


- Let's program your clickers to this room's RF channel = 01 (zero one)
 - Press and hold the ↓ button **until** the LED turns **red**
 - Press the J/0 button once.
 - Press the A/1 button once.
 - Press the ↓ button again. The LED will flash **green** a few times and then turn off.You're done!



Your clicker may get deprogrammed by random keying when carried in a backpack: **just repeat these steps before use**

Find your clicker's serial number

- Look on the back to find your clicker's unique serial number, and write it down for later.
 - Your answers are recorded against this number
 - If you have the colorful model, you have to open the battery compartment

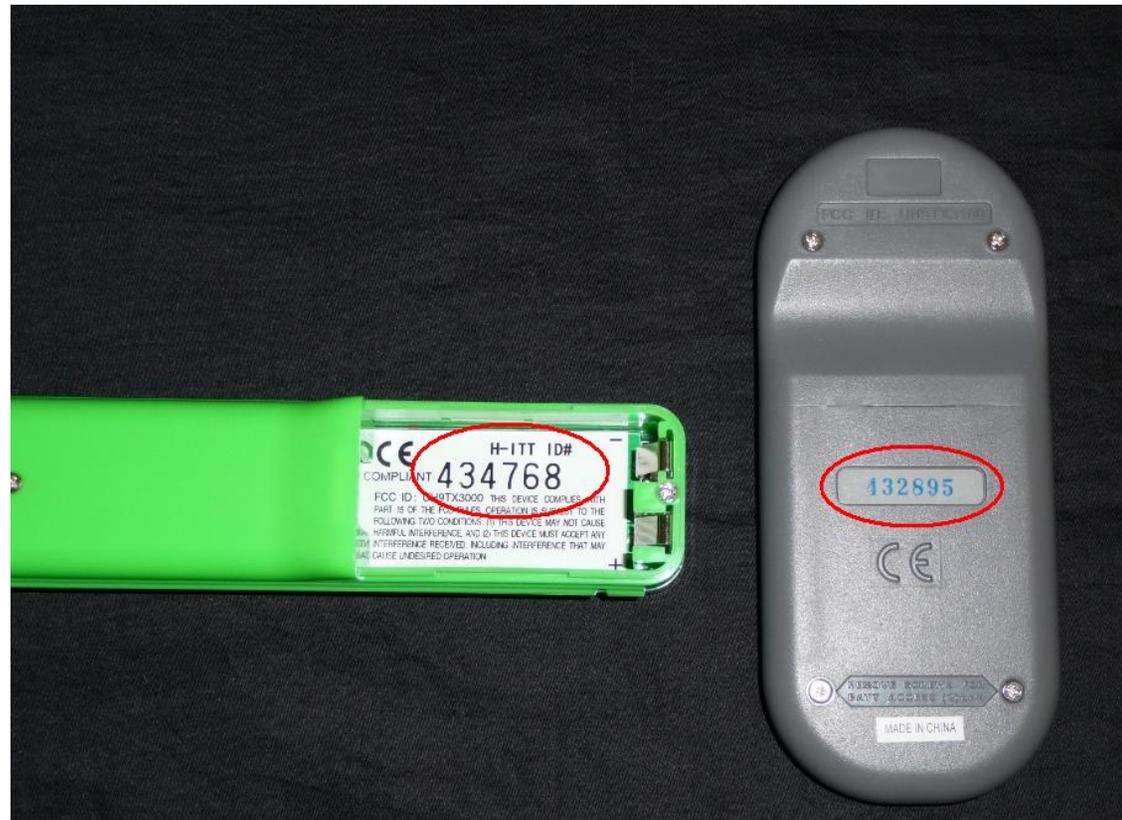

Register your clicker later today

- Go to (“Clicker registration” link on course home page)
~~<https://catalyst.uw.edu/webq/survey/wilkes/188833>~~
- Follow instructions there carefully – do not click “submit” until you are SURE all info is entered in the format requested
- When the clicker system is opened for you to enter your response to a quiz question, the projector screen will show a 3-character code for every clicker when its response has been received OK
 - You may register a 3-character personal alias which will be displayed on the projector screen to confirm your answer has been recorded
 - If you leave that space blank when registering, your screen code will just be the last 3 digits of your clicker serial number